



- 0423 715 901
- 59 Luke Street Hemmant Qld 4174
- sales@strongcast.com.au


Appendix B


Dual Check Valves Installation Instructions


For Dual Check Valves: ZC707920, QC707920,C707820, ZC707925, QC707925, C707825

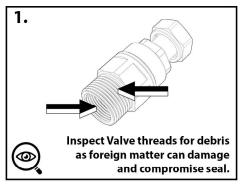


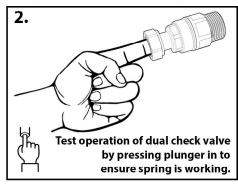

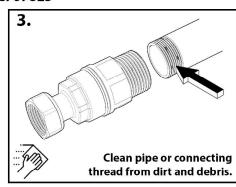

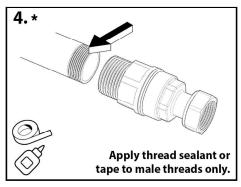

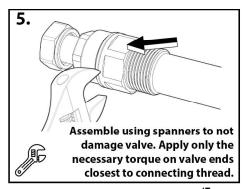

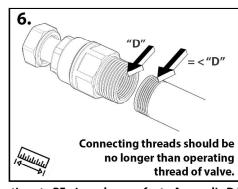

(For connections to PE pipe, please refer to Appendix D.)

(note 4* AS4020:2018 approved thread tape / sealants only)

Appendix C

Maintenance of Dual Check Valves

For Dual Check Valves: ZC707920, QC707920, C707820, ZC707925, QC707925, C707825

